


Bob's Knobs™

TELESCOPE COLLIMATION THUMBSCREWS

6976 Kempton Rd., Centerville IN 47330 USA
www.bobsknobs.com

TELRAD® INSTALLATION

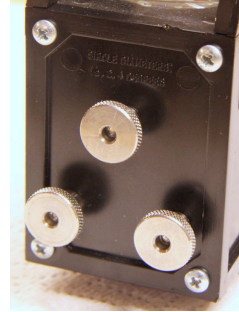

These knobs replace the small thumbnuts on the Telrad finder for easier adjustment. To install, first tighten each of the factory thumbnuts until it becomes slightly harder to turn. This will compress the springs on the other side of the plastic panel. Now you can remove one thumbnut and the end of the factory screw will remain accessible from the outside. Thread a Bob's Knob onto the screw and tighten it until it becomes slightly harder to turn. Do not over-tighten. Repeat this process for the other two knobs. Now loosen each knob about four or five turns. Mount the Telrad onto your telescope and re-align.